

CONXTD - Remote Set / Unset

Wire WebWay output to Intruder Panel key switch to trigger Set/Unset of Intruder Panel.

Technical Specification

Manufacturer	Scantronic / Eaton
Model	i-ON
Version	
Minimum SPT software	V2.00
Misc Profile	Pro / Mini: None Nano: Nano - Remote OP/CL
Panel Wiring	End of Line (EOL)
Technical Notes	Panel must be connected to SPT serially and be signalling either SIA format or Hardwire Pins for alarm reporting.

Cable Connection

Pro/Mini WebWay	Panel
3A	A EOL
3B	A Zone

Nano WebWay	Panel
1a	A EOL
1b	A Zone

Panel Programming via Keypad

1. Enter Engineer mode.
2. Navigate to Installer Menu.
3. Select Detector/Devices (Tick).
4. Select Detectors (Tick).
5. Scroll Down to select Add/Del Detectors..
6. Select Program Zones (Tick).
7. Select zone and then press Tick.
8. Tick to select zone type.
9. Scroll to Keyswitch Latched.(Tick)
10. Exit and save.

CONXTD

Add to new CONXTD site

Select to enable set / unset feature when registering a site to CONXTD within Connections.

Add to existing CONXTD site

Submit a request using the 'Help' button in CONXTD Manager within Connections